



# North Florida Communications

[www.northfloridacommunications.com](http://www.northfloridacommunications.com)

[www.ournewphone.com](http://www.ournewphone.com)

LG IPECS

eMG80 Phone System

## Conference Room Feature





With a Conference Room internal and external parties are invited to the conference and can join the conference without further action by you, the Conference Room Supervisor. A Conference Room can be password protected so that only parties that enter the password are allowed to join the Room. As parties enter the Conference Room a tone is provided notifying members that a party has entered the conference.

A maximum of 13 parties can join a Conference Room and two such conferences can be active simultaneously.

A system Attendant can view the list of participants in an active Conference Room and close any Conference Room.

### To set-up a Conference Room

- 1) Press the  (Transfer/Program) button.
- 2) Dial 53 to create a Conference Room.
- 3) Dial the desired Conference Room number (1-9)
- 4) If desired, enter a password for the Conference Room (exactly 5 digits)
- 5) Press the  (Hold/Save) to establish the Conference Room.



### To Join a Conference Room

Alternatively, we can dial by name:


- 1) Lift the handset
- 2) Dial 59 (Conference Room entry code)
- 3) Dial the Conference Room Number (1-9)

- 4) Dial the Conference Room password (if needed).

#### **To Close a Conference Room**

- 1) Press the  (Transfer/Program) button
- 2) Dial 54 (Conference Room close code)
- 3) Dial the Conference Room Number (1-9)
- 4) Dial the Conference Room password
- 5) Press  (Hold/Save) to delete the Conference Room

#### **To Transfer an Active Call to a Conference Room**

- 1) Press the  (Transfer/Program) button
- 2) Dial 59 (Conference Room entry code)
- 3) Dial the Conference Room Number (1-9)
- 4) Dial the Conference Room password
- 5) Hang-up to complete the transfer.

*Your system administrator can program a selector code so that outside callers can select the conference room from your main auto-attendant. A unique phone number may also be used just for a conference room.*